

# LE-HDWWE5D

## ESD Safe Magnifying Lamp with Built-in Tilt Camera



The LE-HDWWE5D combines a magnifying lamp with a camera inspection system, enabling direct image viewing on an HDMI monitor and image/video capture on the provided microSD Card.



**RE-IMAGINE** YOUR  
MAGNIFYING LAMP



## Built-in Camera

**INSPECT THROUGH A MONITOR AND  
MAGNIFYING LENS**


Its innovative feature allows team members to simultaneously observe subjects under the magnification lens in real-time while the user conducts an inspection through the lens.

 ideal-tek

## KEY FEATURES

Ideal-tek's High-Definition Camera Magnifying Lamp, the newest addition to our visual inspection systems, retains the beloved features of previous models and incorporates a high-quality camera. This all-in-one unit enables direct HDMI monitor viewing, captures images/videos on a microSD Card, and supports PC connectivity for viewing and managing files.

- HDMI Output - connect to you HD monitor
- USB -C Output - Connect the camera to your PC
- Crystal-clear 5-diopter glass lens (2.25x)
- View/Save Images on a micro SD card
- Inspect objects through the magnifying lens & on an HD monitor simultaneously
- ESD Safe - Dissipates electrostatic discharge
- Frosted LED diffuser for uniform light spread
- 60 LEDs with adjustable color temperature
- Fully covered spring balanced arm, max reach 36 inches (914 mm)
- Included IR remote to control on-screen functions

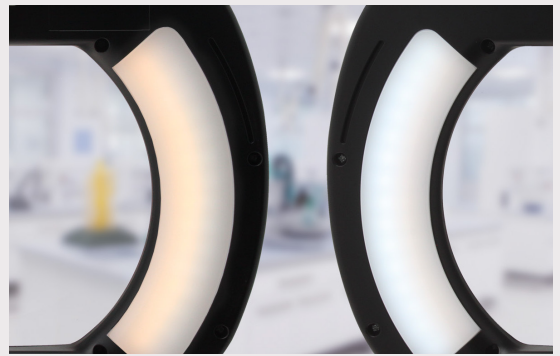

### LE-HDWWE5D 5 Diopter ESD Safe

<b>Magnification</b>	5 Diopter (2.25x)
<b>Reach</b>	Up to 36" (914 mm)
<b>Illumination</b>	30 High Intensity 6500K (Cool) LEDs 30 High Intensity 3500K (Warm) LEDs
<b>Output</b>	HDMI + USB

This product contains a light source of energy efficiency class F.

<b>Built-in Camera</b>	<b>USB Output</b>	<b>5 Diopter Lens</b>	<b>Micro SD CARD</b>
On-screen Viewing	Connect to your PC	2.25x Magnification	Save and view Images / Videos

