

Product Datasheet

Product code: **5XCPR.SA.1**

Product type: Plastic Replaceable Tip Tweezers

Made in: Switzerland

Description: Type 5XCP Plastic replaceable tip tweezers are suitable to applications which require holding a flat component firmly. Reverse action helps to hold the component firmly in a resting position. The Carbon Fiber reinforced ESD PEEK Plastic provides the tweezers with ESD and non-scratching properties combined with excellent high temperature resistance.

Tip description: straight, very fine, sharp

Tip material: PEEK reinforced with carbon fiber (CP)

Coating/finishing: Sandblasted

Body material: Anti-Magnetic Anti-Acid Stainless Steel (SA)


Picture:



Tweezer dimensions:

| | |
|--------|-----------------------|
| OAL | 125.0 mm – 4.921 inch |
| Width | 10.0 mm – 0.394 inch |
| Height | 10.0 mm – 0.394 inch |

Tip details:

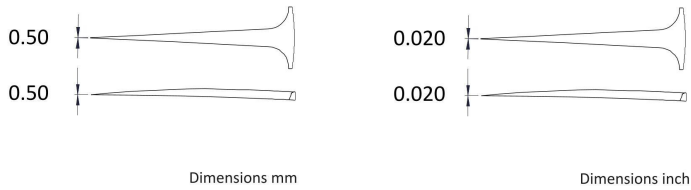

Tip dimensions:

| | |
|---------------|----------------------|
| Tip width | 0.50 mm – 0.020 inch |
| Tip thickness | 0.50 mm – 0.020 inch |